

# USER MANUAL



## Reading the time

- (1) The watch always indicates the time of the destination set at 12 o'clock.
- (2) The watch has a 2<sup>nd</sup> hour hand which indicates a.m. or p.m. at the destination set at 12 o'clock.
- (3) The bezel and the watch are currently set for London and the time is 10:10 a.m.

The continuous second is displayed with a rotating disk.

The s- means that this destination is subject to DST (daylight saving time). During DST turn always the bezel to the s-Position.



## Setting the time

- (1) Make sure that the bezel is set on the desired destination.
- (2) Pull the crown out to position C
- (3) Turn it until the desired time is reached.
- (4) Push the crown back to position A.

(Position B is not functional)

## Changing the destination

- (1) The bezel and the watch are currently set for London and the time is 10:10 a.m.



- (2) Open the handle






- (3) Turn the bezel and choose the desired destination at 12 o'clock.



- (4) Close the handle  
 (5) Read the time at the new destination.  
 (6) The watch is now set for Rio and the time is 07.10 a.m.

**Note:** During DST turn the bezel to the s-Position as Rio is a destination subject to DST.



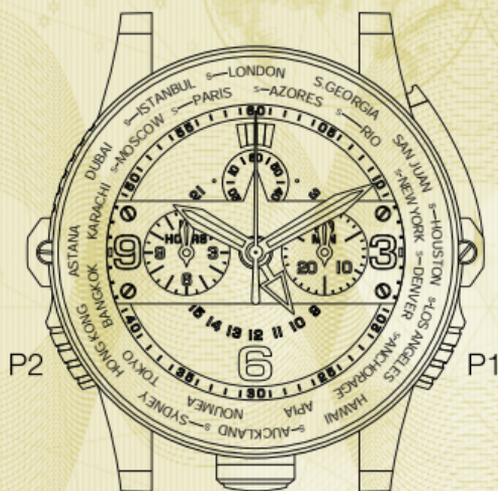

## Using the chronograph

- (P1) To start the chronographs press on pedal P1. To stop the chronographs press again on pedal P1.
- (P2) A single press on the pedal P2 returns to zero all hands. This return-to-zero is only possible if the chronograph has been stopped with a press on pedal



## Reading the chrono time

- (1) The elapsed seconds are displayed with the central hand on the outer ring. The minutes and the hours are displayed on the auxiliary dials 'HOURS' and 'MIN' on the dashboard.
- (2) The elapsed time in this example is  
10 hours  
5 minutes  
34 seconds